



Assembly Instructions

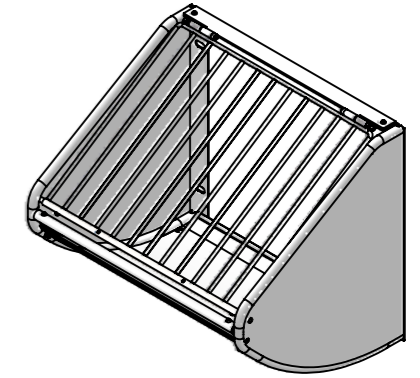


32706 - Futtersparraufe Metall
 32706 - Râtelier en métal
 32706 - Feed Storage Rack Metal




Pos. 1 - 32706-1
1x

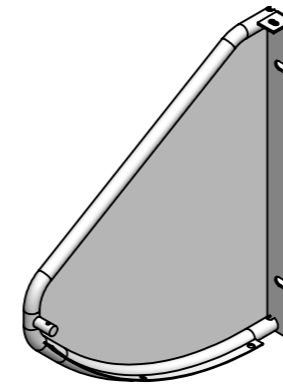


Pos. 2 - 32706-2
1x

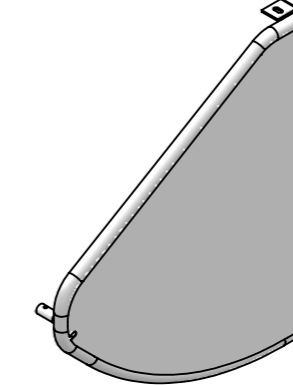


Pos. 3 - 32706-3
1x

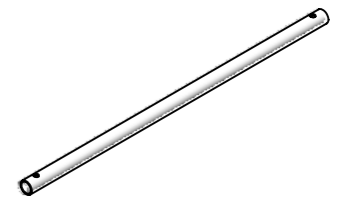


Pos. 4 - 32706-4
1x

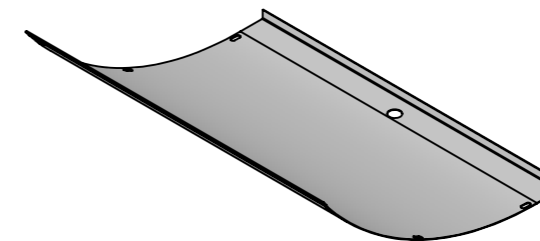

Pos. 5 - 32706-5
1x

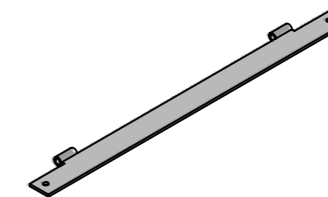


Pos. 6 - 32706-6
1x

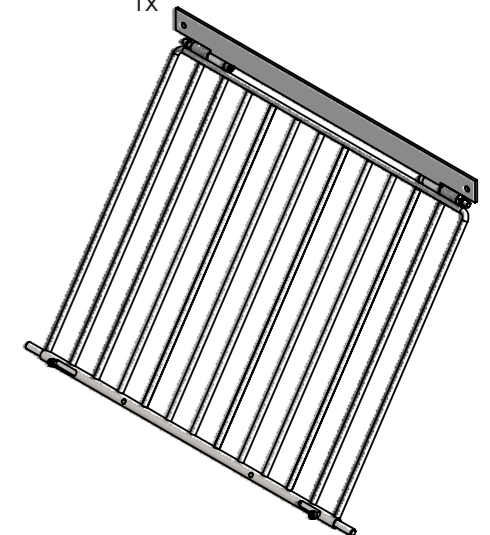

32706-7

Pos. A1
M8x80
2x

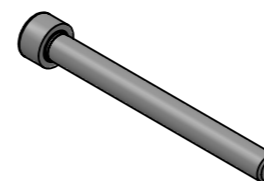

Pos. A2
M8 - Self Locking
2x



Pos. A3
M6x18
4x



Pos. A4
M6x10
6x



Pos. A5
F6
8x



Pos. A6
M6
6x



Pos. A7
M6 - Self Locking
2x



Pos. A8
A6
2x



